

Uptime

Uptime()

Return number of seconds since last reset.

Description

```
Uptime()
```

This function returns the number of seconds since last reset.

The cause of a reset may be:

- Power being removed/restored
- Software reset due to firmware update
- Software reset requested by the user
- Software or hardware error (Watchdog reset)
- Waking up from sleep mode

Parameters

none

Return value

Returns the number of seconds since the last reset.

Example usage

```
Uptime()
```

Will return 86400 after 24 hours running.

From:

<https://doc.eze.io/> - **ezeio documentation**

Permanent link:

<https://doc.eze.io/ezeio2/expref/uptime>

Last update: **2019-09-02 18:55**

